


Insert a screwdriver to know the holes are aligned



Take care about the position of the decompressor

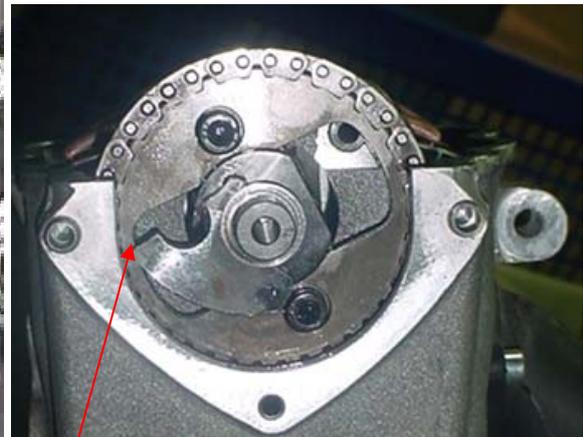